


Manual Exposure Shooting

You can manually set the shutter speed, aperture, and ISO speed for movie shooting. Using manual exposure to shoot movies is for advanced users.



1 Set the Mode Dial to <Movie>.

- ▶ The reflex mirror will make a sound, then the image will appear on the LCD monitor.

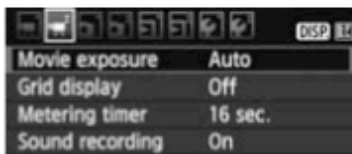


2 Select [Movie exposure].

- Under the [Movie] tab, select [Movie exposure], then press <OK>.




3 Select [Manual].

 
- Select [Manual], then press <OK>.

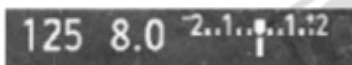

4 Set the shutter speed and aperture.

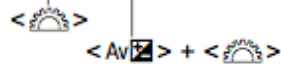 

- To set the shutter speed, turn the <Shutter> dial. The settable shutter speeds depend on the frame rate <FR>.
- 60 / 50 : 1/4000 sec. - 1/60 sec.
- 30 / 25 / 24 : 1/4000 sec. - 1/30 sec.
- To set the aperture, hold down the <Av> button and turn the <Aperture> dial.

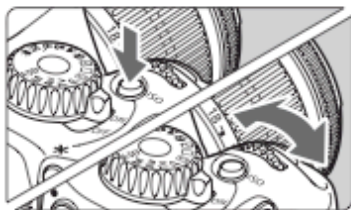

5 Set the ISO speed.

- Press the <ISO> button and use either <Shutter> or <Left/Right> key to select the ISO speed.
- Auto ISO setting: ISO 100 - 6400
- Manual ISO setting: ISO 100 - 6400